



Skedco, Inc.

Web Site: <http://www.skedco.com> • E-mail: skedco@skedco.com

P.O. Box 3390 • Tualatin, Oregon 97062 USA
10505 SW Manhasset Drive • Tualatin, Oregon 97062 USA
Phone (503) 691-7909 • FAX (503) 691-7973

SKEDCO – EVAC TRIPOD INSPECTION

To be inspected by the end user before and after each use and then by a competent person (instructor) at the end of the instructional season or if stored for long periods of time.

1. Inspect the tripod for any damage.
 - a. Check all bolts and nuts at the header and feet for any signs of corrosion, cracks or deformity.
 - b. Inspect the head, feet, legs, pins, chain for cracks, corrosion, broken or cracked welds, missing or loose parts, deformation, deep pitting, burrs, sharp edges, cuts, deep nicks, improper function, burns and heat exposure.
 - c. Inspect the foot pads for excessive wear, cuts, broken or loose parts.
2. If visual damage is noted, remove tripod from service and attach a yellow repair tag with problems noted. Do not attempt field repairs, any repairs needed must be performed by an authorized service center.
3. If the tripod is subject to a major fall or load, remove from service and attach a yellow repair tag with problem noted.
4. Heavily soiled, wet or contaminated equipment should be cleaned and dried prior to storage. Clean the tripod using mild soap and water. Dry with a clean cloth. Excessive accumulation of dirt or other matter may prevent proper function of the tripod.
5. Stowing the Tripod – refer to the Skedco – Evac Tripod Instruction Sheet included in this section of the booklet.